

CONGRATULATIONS, & THANK YOU for purchasing the best receiver decoders in the world!

FACTORY SETTINGS

Operation: “clicks” counted (3, 5 or 7) in a 5 second period.

Relay Operation: Jumpers are pre-installed for standard operation. (See manual for other options)

Frequency: 122.8 MHz unless a different frequency is requested at the time of order.

Squelch Factory Settings

Squelch Settings			
Sw2	#5	#6	#7
-6dB	1	1	1
-3dB	0	1	1
Nominal	1	0	1
+3dB	0	0	1
+6dB	1	1	0
+9dB	0	1	0
+12dB	1	0	0
+15dB	0	0	0


DOWNLOAD
MANUAL HERE



INSTALLATION

- Equipment should be located as far away from the antenna as possible.
- Secure the antenna mast to a sturdy structure approximately 10 feet high, and in clear view for approaching aircraft.
- Coiling the excess antenna cable is not recommended
- Contact us ASAP if you need assistance Radio@RuralElectric.com or (480) 986 1488

VERY IMPORTANT!
Nylon Insulator

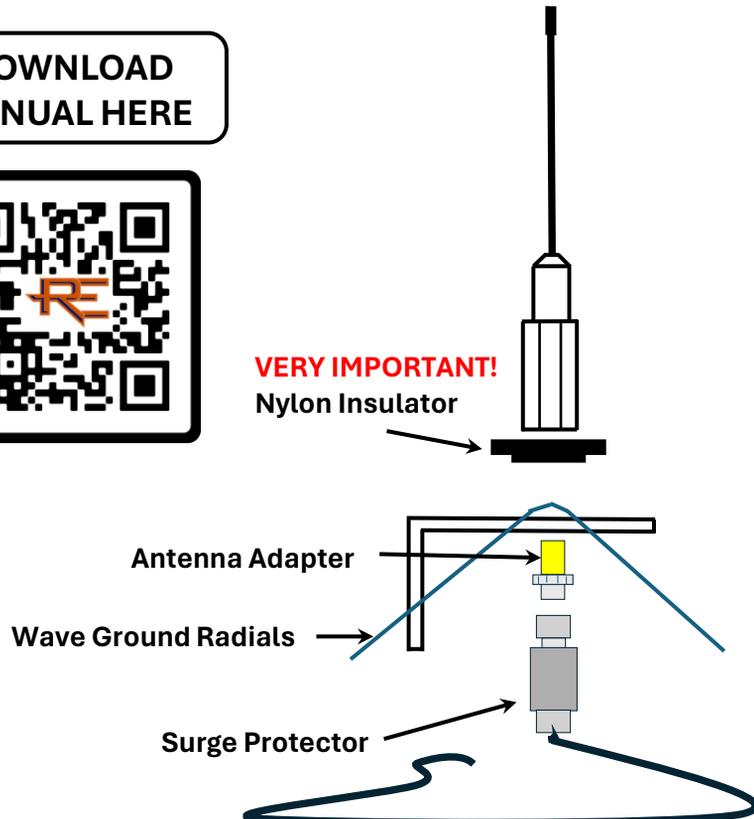

Troubleshoot: If the L-854 is receiving interference, causing the runway lights to activate, power off the unit, change the squelch to the next +3 setting, power on the unit and observe any difference. Repeat the step to +6 etc. Contact us ASAP if you need assistance Radio@RuralElectric.com or (480) 986 1488