

# Quick guide to changing radio de-bounce timing

Confirm that your radio has the new “blue button” controller (right), and not the older “gray button” model (left)

Old (obsolete)



New



**NOTE:** The symbols ◀ ▶ ▲ ▼ in this guide will be used to indicate the directional buttons on the controller as shown (left). These are used to scroll through the controller’s menu/options



Power on your radio



Press "OK" to enter the main menu screen



The top line on the screen will flash, and you can see that the controller is in "RUN" mode



Press "OK" again to enter the password unlocking screen




Press the ▼ button 3 times to scroll down to the numbers for entering the password




The default password is 1 2 3 4 5 6. Scroll to number 1 and press "OK" to enter it. Scroll over to number 2 using the ► button and press "OK" to enter it. Repeat this process until you have entered all 6 digits



Scroll back up to the top line that says "Password" and press "OK" anywhere on the line. This will return you to the menu screen and your controller will be unlocked for editing

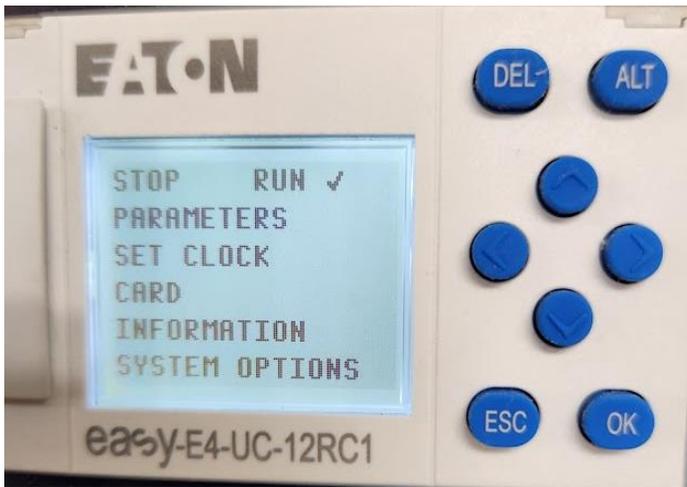

Scroll back up to the stop/run options line and press "OK"

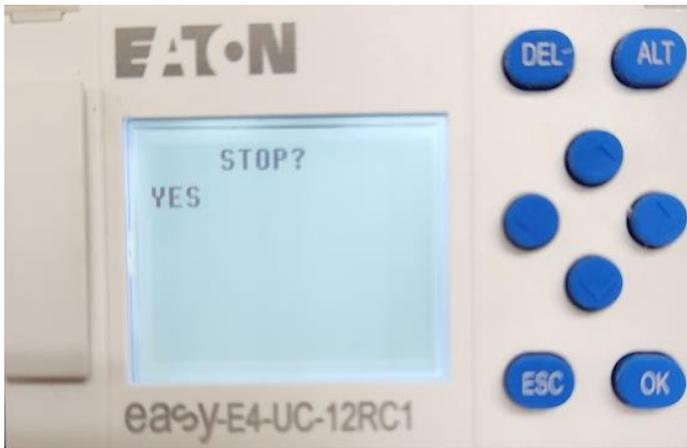

Select "YES" and press "OK" to put the controller in "STOP" mode. This allows settings to be changed



You will be returned to the menu and your screen should look like this



You are now in programming mode. Scroll down to “Parameters” and press “OK”



Scroll down to I1 and press “OK” to edit. 000.125 seconds



Press the  button to scroll over to the desired number and press  or  to change the number. Scroll over to the next number to repeat the process



Press “OK” when finished editing and then press “ESC” twice to return to the menu screen



Press ▲ to scroll back up to the stop/run options line and press “OK”. Select “YES” and press “OK” to return the controller to “RUN” mode



Press the “ESC” button to back out of the menu and return to the main screen. This will password lock your controller. If any other changes need to be made you will need to unlock the controller again

If you have any questions...

**(888) 964-1488 or email [Radio@ruralelectric.com](mailto:Radio@ruralelectric.com)**